


Twist-Lock System

Wand employs a slide-and-twist mechanism.

UNLOCKED: Dots and channel align (left). **LOCKED:** Dots and channel offset (right).

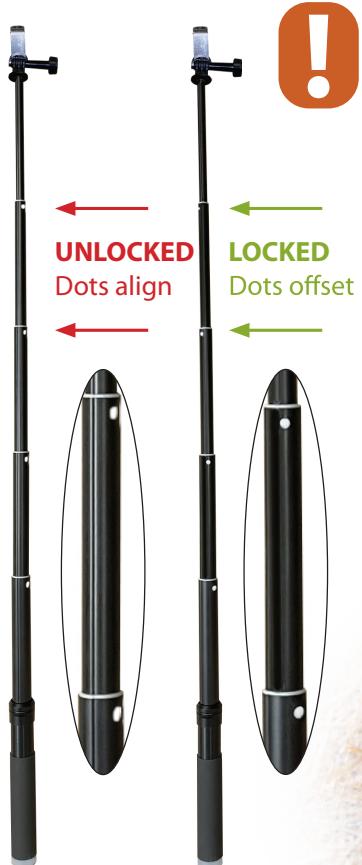

CAUTION

Use care when pulling and twisting the extension wand.

Excessive force will damage the wand.



 **Rockwell Labs Ltd.**
creating the future of pest control

www.rockwelllabs.com
800.891.8610
03015



Aprehend Spray Kit Trigger-Lock Extension Wand Assembly and Use

Note: This extension kit is
**only for use with the
Spray Gun with
Trigger-Lock.**



Legacy spray guns require
Trigger-Lock Retrofit Kit
P/N: APRS210
ConidioTec P/N: 30210



www.rockwelllabs.com

Spray kits and parts are available from your Aprehend supplier.

Contact your Rockwell Labs technical rep, or 800.891.8610 ext 0 if you experience any problems with this equipment.

Important: Before attaching the extension, ensure the sprayer bottle is empty and the battery is in *off* position. **When using the extension wand, the battery or compressor on/off switch should be used to activate the sprayer.**

1. Connect the extension wand to the spray gun as pictured in Figure 1.

2. Run system with empty reservoir to **confirm leak-free connections**—this will ensure proper compressor auto-stop operation during use.

If the compressor continues to run when trigger is not depressed, there is an air leak in the system:

- Verify Trigger-Lock is in the “OFF” (unlocked) position (Figure 2).
- Check and tighten the connections at both ends of the coiled hose.
- An additional washer (supplied) may be required to ensure an airtight fit for the gun.

3. Confirm battery and compressor are in the “OFF” position.

4. Press trigger to release system air pressure.

5. Fill spray gun reservoir with Aprehend.

6. Turn spray gun trigger-lock to “ON” (locked) position (Figure 2).

7. Adjust the extension wand to desired length and angle.

8. Use the battery “ON/OFF” switch to start and finish the spray application.

9. Turn spray gun trigger-lock to “OFF” (unlocked) position when extension wand is not in use.

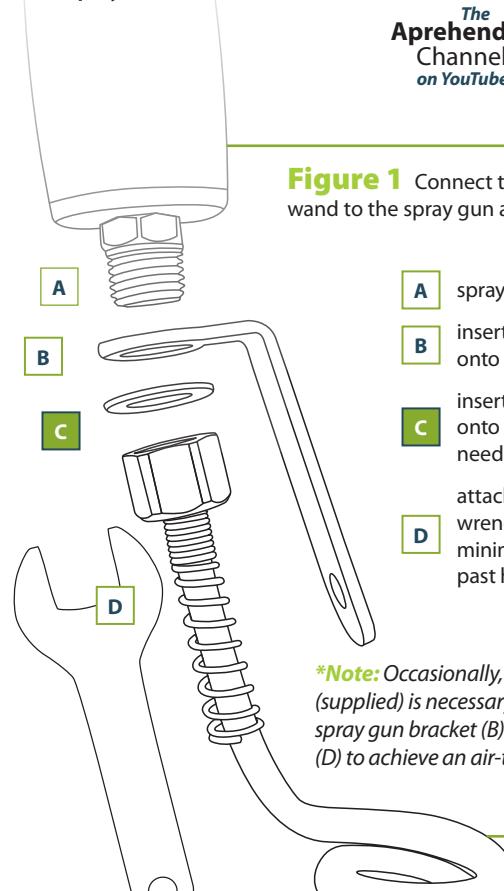


Figure 1 Connect the extension wand to the spray gun as illustrated.

- A** spray gun
- B** insert wand bracket onto spray gun
- C** insert rubber washer onto spray gun, if needed*
- D** attach air hose—wrench-tighten minimum 1/4-turn past hand-tight

***Note:** Occasionally, a rubber washer (supplied) is necessary between the spray gun bracket (B) and coiled hose (D) to achieve an air-tight seal.



Figure 2 Press and twist to toggle between the Trigger-Lock “ON” (locked) and “OFF” (unlocked) positions.

ON (Locked)
Clockwise



OFF (Unlocked)
Counter-clockwise



Extension Wand Components

Spare lock nut, and rubber washer are supplied in case of loss.

- A) Extension Wand With Bracket
- B) Lock Nut, (1) installed on wand and (1) extra
- C) Rubber Washer, (1) installed on wand and (1) extra
- D) Wrench

